





Warnings		 MagicPick User Manual www.sonalux.co.uk
<ul style="list-style-type: none"> • Keep it away from children. Battery choking hazard. • Cover is flammable when exposed to high temperatures. • Please dispose of the battery at a recycling centre, do not throw it in the bin. <div style="text-align: center;">    </div> <p style="text-align: center;">Made in the UK</p>		
Specifications		Instructions
Model	SMP-2.0	<ul style="list-style-type: none"> • Slide switch to turn on or off. • Push the button to change mode. • Long press for metronome mode. <p>Lights will flash blue. Tap the tempo 4 times using the button and you should start hearing a beep. Press the button to measure the tempo again. To escape the metronome mode, long press the button.</p> <ul style="list-style-type: none"> • The pick enters sleep mode after 5 minutes of inactivity. To disable, hold button (1 sec) while turning the pick on. • To replace batteries, use pliers gently.
Material	Resin/FR4	
Battery	3V CR1225	
Dimensions	~35mm*28mm*5.5mm	
Modes		
<ul style="list-style-type: none"> • Rainbow • Green/Pink • Yellow/Blue • Pink/Cyan • Blue/Red • Red/Green • Speed Alternate 		